


Rail Jack Felt Replacement

You will need:

* Polyurethane Glue



* Felt Sleeve

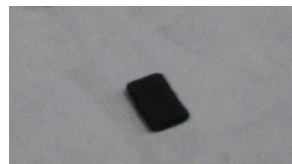

STEP 1.

Place a small amount of glue
on the rail jack



STEP 2.

While slightly pinching felt sleeve, push
sleeve onto rail jack and twist 2 or 3
rotations to spread glue.



STEP 3.

Push felt sleeve all the way against the
wood rail.

